

## ST-8112 Instructions


### Specifications:

1. Power supply: 12V/24V AC/DC.
2. Frequency: 433.92Mhz.
3. Kee log rolling code fixed code.
4. 2 channels.
5. Maximum storage: 400 codes.
6. Maximum 2200W/10A.
7. Temperature: -20 °C ~ 70 °C
8. Reception range: 70-100m




### How to Program remotes

1. Learning transmitter's codes:  
Press "learn 1" or "learn 2" for 1 second, the "learn\_led" light, then, press the button which you choose on the transmitter till the "learn\_led" flash and go out, the transmitter's code has been stored.
2. Repeat the above steps for other transmitters.
3. Erasing transmitter's codes:  
Press "learn 1" or "learn2" and hold on to make the "learn\_led light till go out, all codes of transmitters which had been stored are erased.

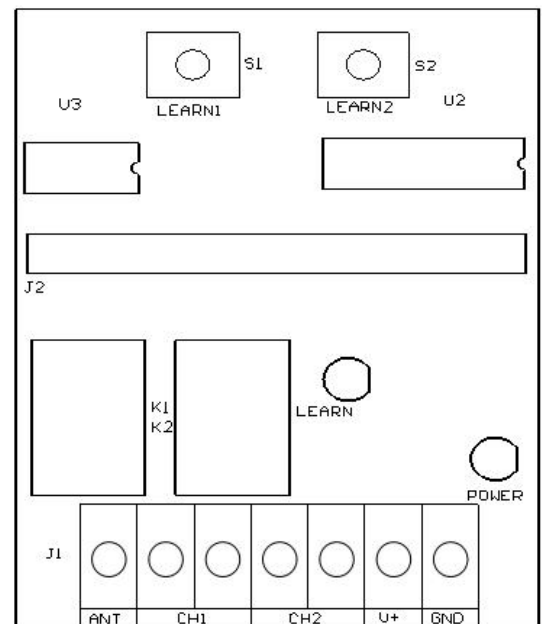


## How to add to Tuya:

1. Download 'Tuya Smart' application
2. The "learn\_led" light must be flashing if not press on Learn1 and learn2 together, until it starts flashing.
3. Turn on the 'Bluetooth' and the 'location'
4. Press on 'Add Device'

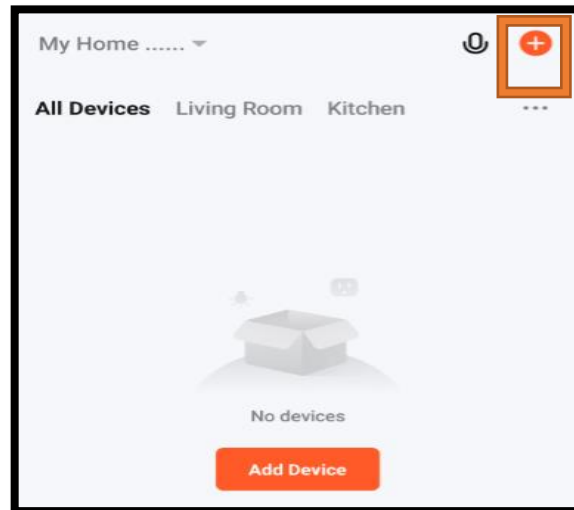

5. Tuya will start searching for nearby devices.

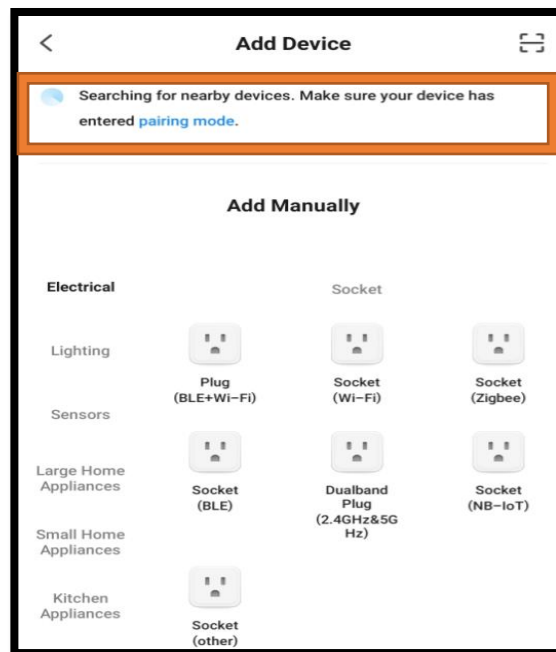

6. The device will appear here you can just press on Add device.